


LOCK JAW

Ladder Grip

INSTRUCTIONS FOR USE


IMPORTANT – PLEASE READ BEFORE USE

- This product is a ladder accessory.
- When using this product apply all safety procedures normally associated with the safe use of a ladder.
- Always use two hands to open the spring loaded handle. Uncontrolled release of the spring loaded handle can cause injury.
- Do not use this product if the structural integrity of a gutter is in doubt.
- Inspection shall be made by the user immediately before and after each use for:
 - Loose bolts and screws
 - Cracks in the plastic components of the product
- Do not use the product if it has been damaged in any way
- Depending on your organisation's OHS procedures there may also be merit in undertaking a check and tag exercise on the products every 6 months or 12 months depending on extent of usage.

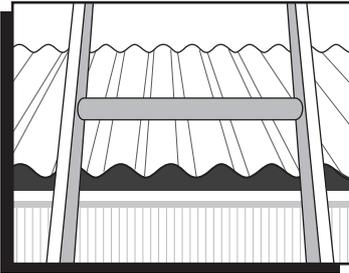


STEP 1

Place ladder against the gutter leaving clearance between rungs to position the Lock Jaw Ladder Grip.

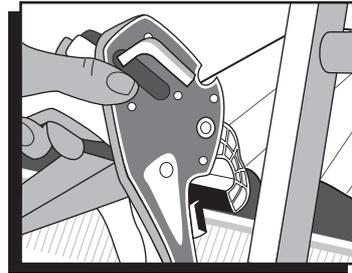


STEP 4

With handle in the open position locate the device's jaws over the gutter with the bar located over the ladder rail. Device should be located firmly against ladder rail.

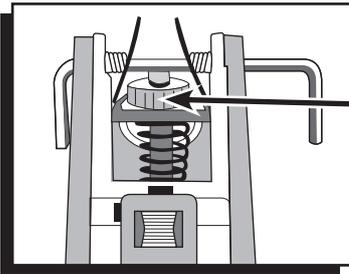


STEP 2

Raise the adjustment knob to ensure the bar assembly is near the fully raised position. The bar can be located down against the ladder rail once the device has been clamped to the Gutter.

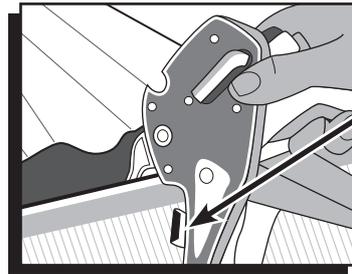


STEP 5

Where possible, ensure that the adjustable jaw fits snugly against the bottom of the gutter lip. This minimises twisting of the device when in use.

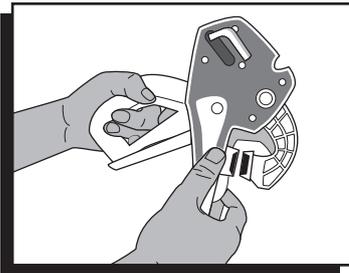

STEP 3

Before climbing the ladder, use two hands to open handle. Push safety lock forward with thumb while pulling trigger to release handle. Then clip the device to your belt before climbing ladder.

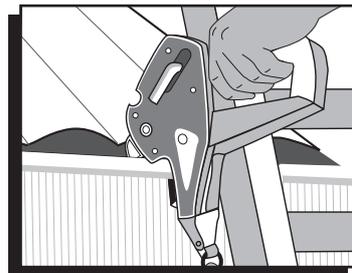


STEP 6

Push the handle down with the palm of your hand to lock the device. There is no need to depress the handle trigger assembly when closing the handle.

A distinct "clicking" sound should be heard as the handle locates into the body of the product. With the handle in the closed position pull lightly against the handle (without depressing the trigger) to ensure that the handle is locked in the closed position.

Warranty This product is guaranteed against faulty materials and workmanship for a period of 12 months from the date of purchase. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. Receipt of purchase must be shown and costs associated with returning the product are the responsibility of the purchaser. If covered by warranty the product will be either repaired or replaced at the discretion of the manufacturer.

30 Day Money Back Guarantee If you are not satisfied with this product you may return it to us within 30 days for a refund. We must receive your returned product before the 30 day period expires. The 30 days applies from the date of purchase. If payment was made by credit card then 3% will be deducted from the return funds to cover merchant processing fees. Goods must be returned at the purchaser's cost.

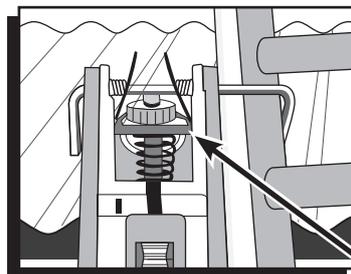

STEP 7

Using the adjustment knob locate the bar assembly down onto the ladder rail then spread spring loaded locking tabs to slide bar firmly against the side of the ladder rail.